


Instruction Manual for Assembly



GLEAM


1

Remove Cap

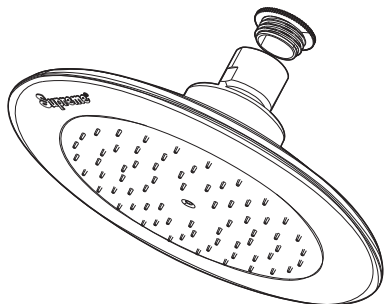


2

Roll Teflon tape on the threading to prevent leakage

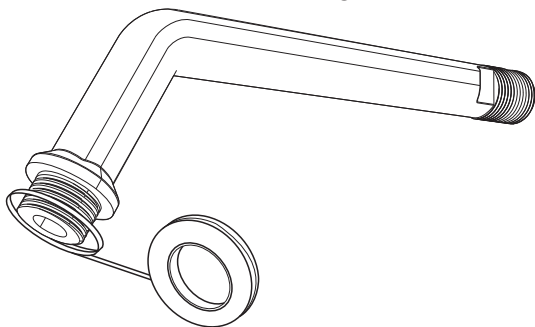


3

Tighten the shower head to complete the assembly

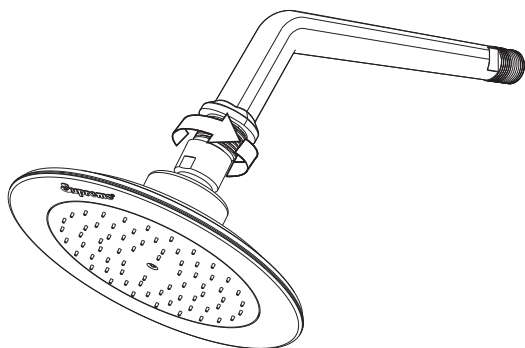

4

Full Assembly

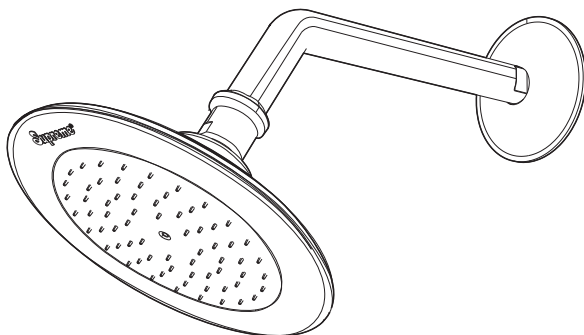


Instruction Manual for Assembly



NOVA


1

Remove Cap

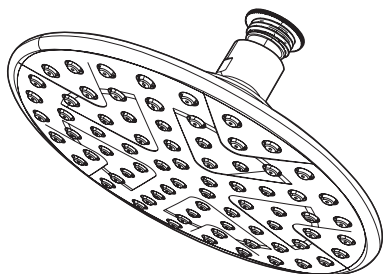


2

Roll Teflon tape on the
threading to prevent leakage

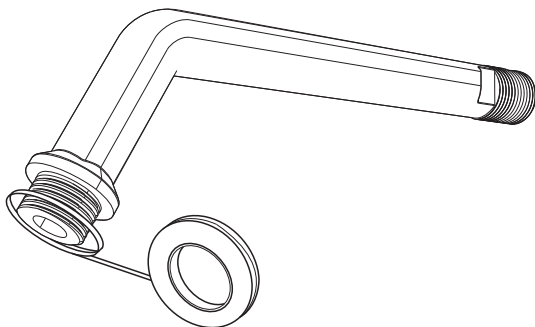

3

Tighten the shower head to
complete the assembly

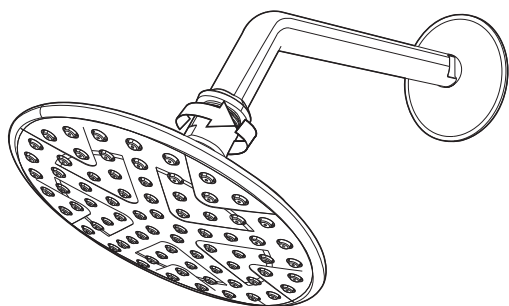

4

Full Assembly




Instruction Manual for Assembly



INFINITI


1

Remove Cap

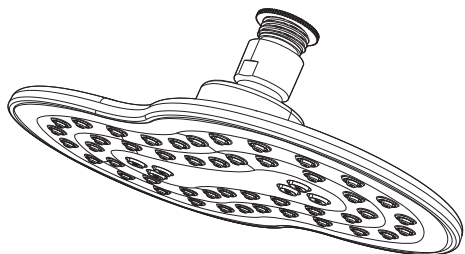


2

Roll Teflon tape on the
threading to prevent leakage

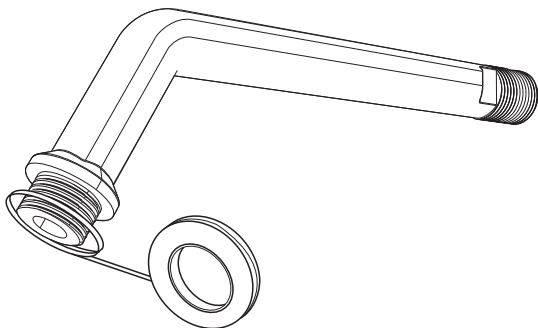


3

Tighten the shower head to
complete the assembly

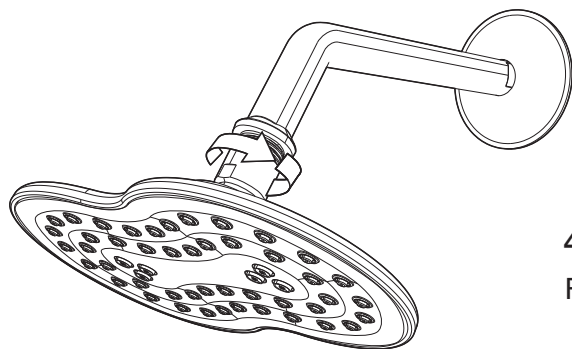

4

Full Assembly

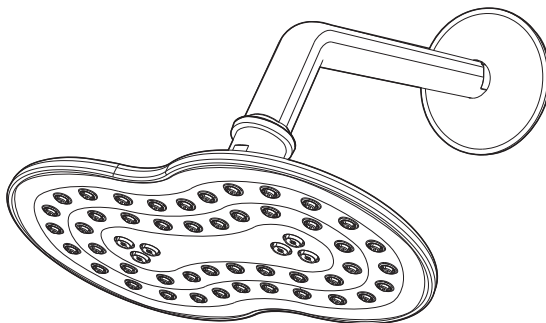


Instruction Manual for Assembly



NEXON


1

Remove Cap

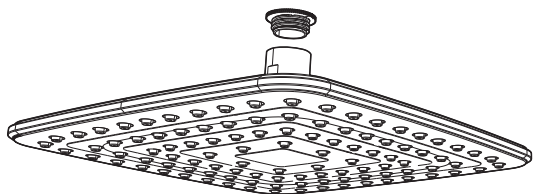


2

Roll Teflon tape on the
threading to prevent leakage

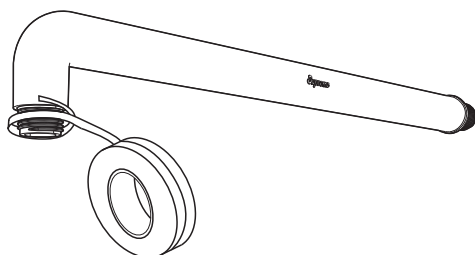

3

Tighten the shower head to
complete the assembly

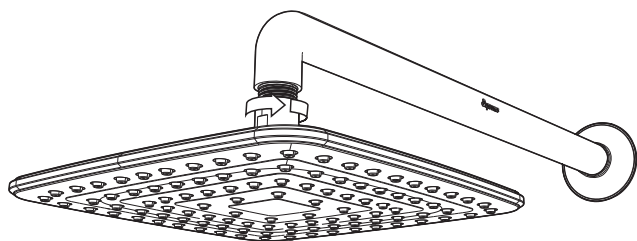

4

Full Assembly

